



ELITE
DECOR®

PRESTIGE DECOR

Prestige Decor

Instruction for installation

Recommendations for installation work



1. Clean the facade surface from construction mortar, salt deposits, mold and other contaminants. The building base must be dry and protected from moisture. Apply a primer that equalizes the absorption capacity of the base.



2. Prepare the slope element for installation. Apply an adhesive construction mixture to the places where decorative elements are installed.



3. Materials and products for fastening decorative parts to the building base must ensure a rigid connection between themselves (without gaps). In all cases, glue is a mandatory component of fastening.



4. The architectural detail, with freshly applied adhesive mass, is manually pressed to the construction base. The pressure continues until the entire adhesive mass has reliable contact with the base.



5. Check horizontality of the glued decorative element with a construction level.



6. Check with a square the correctness of the angle slope in relation to the plane of the window.



7. At the place where the elements meet each other, apply adhesive foam to the entire depth of the seam. The thickness of the glue-foam seam should be 1.5-2.0 mm. Remains of adhesive foam should protrude from the seam by 2-3 mm.



8. Lay out a wall for gluing of a platband.



9. Mark the decorative elements for trimming between themselves.



10. Trim the decorative element to the desired size and configuration.



11. Apply the adhesive mixture to the place of installation of the decorative element.



12. Layer of glue-foam with a diameter of 10 mm should be applied to the entire surface joint of the element.



13. After complete drying, it is necessary to cut off the excess adhesive foam (2 mm), freeing the surface for applying the restoration mixture.



14. If necessary, fix the elements between by means of neatly screwed screw.



15. Free all connecting seams of 2 mm in width and depth from adhesive foam, for subsequent application of "DarMix" restorative mixture.




16. Cover the prepared joints by restorative mixture "DarMix" by spatula to a depth of 2-2.5 mm.



17. After complete drying of the mixture "DarMix" all joints and restored places must be cleaned by sanding.



18. Mounted decorative elements are required to substantiate using primer, recommended by the manufacturer for further decorative finishing.

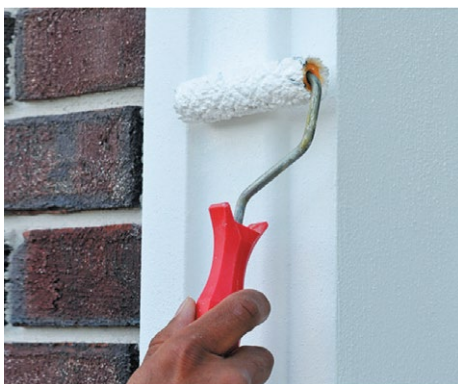

19. After completing the installation of the elements decorative finishing of a facade is done (using acrylic paints or decoration, using decorative facade plasters).

Recommendations for installation work when installing facade decor.

1. Installation and restoration work must be carried out at an air temperature not lower than 5° C at any time of day. The recommended humidity is not more than 50%. These specifications are mandatory for obtaining a quality result at any stage of the work cycle.
2. It is necessary to use the glue construction mix and glue-foam for front works that are recommended by manufacturer for gluing expanded polystyrene to the surface.
3. To perform high-quality installation it is necessary to use:
 - working tools: hacksaw, a set of spatulas in the range, a mock-up knife, a glue gun for foam, a roller and paint tray, screwdriver;
 - measuring and marking tools: level, angle, ruler, reflective paint cord;
 - consumables: adhesive construction mix, glue-foam, washing for glue-foam, restoration mix "DarMix", masking tape, screws, protective equipment (gloves, etc.).



Recommendations for joining seams and their restoration.

1. Seal horizontal and vertical joints of architectural elements with a bearing surface.
2. Apply adhesive foam for expanded polystyrene with a glue gun for the entire area of one of the bonded surfaces. Apply the foam with a layer thickness of about 10 mm. Pay attention to the preparation of the seam for gluing. Seams need to be cleaned from dust, the remains of a protective layer, expanded polystyrene and other dirt. In violation of this condition, the adhesive foam will not stick to surfaces and will not perform its functions.
3. Glue the joints of parts with a seam thickness of 1.5-2 mm. Leftovers adhesive foam should protrude from the seam by 2-3 mm. Enable the seam to dry according to manufacturer's recommendations.
4. If the joint exceeds the specified width, it is necessary to prepare insert from expanded polystyrene that will help to get necessary gaps. If there are large gaps between parts, adhesive foam should be applied on both sides of the polystyrene insert.
5. Cut the dried foam to a depth of 2 mm from the surface for application of the restorative mixture.
6. Apply the restorative mixture to a depth of 2-2.5 mm. Magnification the depth of the seam will lead to cracking due to the rapid drying of the top layer and prolonged drying inner part. Reducing the depth of the seam will lead to depressurization, because the restoration mixture will perform only a decorative, not a protective function.
7. Painting, priming or applying decorative plasters are carried out only after complete drying of seams.

Conditions of storage of a facade decor.

1. It is necessary to carefully observe the conditions of palletizing: storage of products in stacks and without packaging is not allowed. Improper palletizing conditions can damage details that will be at the bottom of the stack.
2. It is not allowed to store products on an uneven surface, leaning against the wall and on surfaces, which dimensions are less than the stored products.
3. No precipitation or direct sunlight is allowed on unmounted products.